


KT-N898 Brand Code Table

| Brand | Model Code | Brand | Model Code |
|------------|---|--------------------|--|
| ALPIN | 0252, 0253, 0764, 1277, 1789 | LITTLE DUCK | 0015-0020, 0530, 1043 |
| AUCMA | 0288-0296, 0462, 1313, 1998 | LOREN-SEBO | 0255, 0471, 0472, 0767 |
| AUX | 0297-0300, 0451, 0474, 0475, 0812, 1987 | MACQUAY | 0234-0237, 0465, 0746, 1773 |
| BANSHEN | 0264, 1288, 1800 | MICOM | 0415, 0927, 1951 |
| BOERKA | 0383, 0434, 0436, 0437, 1407, 1972 | MIDEA | 0260-0265, 0526, 1289, 1976 |
| CARRIER | 0203-0209, 0456-0458, 0482-0486, 0563-0565 | MITSUBISHI | 0001-0045, 0476-0479, 0522, 0523, 0568, 0582, 1502 |
| CHANGHONG | 0301-0308, 0813, 1843 | NORITZ | 0431, 1455 |
| CHIGAO | 0379-0382, 0489, 0515, 1403, 1916 | PANASONIC NATIONAL | 0138-0154, 0483, 0490-0492, 0653, 1507 |
| CHOFU | 0184-0187, 1209, 1723 | PANDA | 0378, 0890 |
| CHUNLAN | 0345-0350, 0450, 0453, 1373 | PHILCO | 0210, 0211, 0487, 0488, 1746 |
| CORONA | 0155-0163, 0459, 1180, 1995 | PROTON | 0421-0423, 0933, 1958 |
| CONROWA | 0377, 1401, 1913 | RAYBO | 0362-0367, 1386, 1898 |
| CONSUL | 0463, 0975 | ROWA | 0369, 0438, 0439, 0494, 0527, 0531, 1393 |
| DEAWOO | 0203-0209, 0406, 0715, 1942 | SABRO | 0435, 0506-0508, 1018, 1971 |
| DAIKIN | 0171-0183, 0566, 0577, 0583, 0566, 0577, 0583, 0685, 1707 | SAIJO DENKI | 0212-0215, 0724, 1750 |
| DOCTOR | 0221, 0449, 1245, 1985 | SAMPO | 0424-0426, 1448, 1961 |
| DONGBAO | 0355-0361, 1385, 1891 | SAMSUNG | 0188-0196, 0516, 0518, 0700, 1726 |
| DONGXINBAO | 0413, 0925, 1654 | SANYO | 0046-0095, 0529, 0530, 0558, 1582 |
| ELECTROLUX | 0216-0220, 0569, 1245, 1752 | SASUKI | 0254, 0470, 0766, 1494 |
| FEDDERS | 0498, 0499, 0528 | SHANGLING | 0384-0388, 0444, 0445, 1980 |
| FRESTECH | 0277, 0519, 0520, 0789 | SHANXING | 0392, 0449, 1416, 1985 |
| FUJITSU | 0127-0137, 0464, 0552-0554, 1152 | SHARP | 0096-0106, 0525, 0609, 1640 |
| FUNAI | 0430, 0481, 1505, 1966 | SHENGFENG | 0376, 0480, 1504, 1912 |
| GALANZ | 0371, 0372, 0521, 0883, 1908 | SHINCO | 0351-0354, 0454-0456, 1887 |
| GENERAL | 0128-0136, 0639, 0976, 1161 | SHUANGLU | 0376, 0404-0407, 0480, 1941 |
| GUQIAO | 0244, 0291, 1268, 1827 | SHUAIKANG | 0288, 0800 |
| GLEE | 0398, 0399, 0910, 1935 | SONGGE | 0428, 0429, 1453, 1964 |
| GOLDSTAR | 0201, 0466-0469, 0979, 1737 | SOVA | 0409, 0410, 0921, 1434 |
| GREE | 0309-0316, 0482, 0512, 0513 | SUMMER | 0427, 1451 |
| HAIER | 0266-0272, 0453-0455, 0778 | SUNDURG | 0257, 0505, 1017, 1793 |
| HISENSE | 0332-0335, 0517, 0847, 1359, 1868 | SWAN | 0434, 0477, 0516, 0524, 0946 |
| HITACHI | 0118-0126, 0630, 1145 | TADIRAN | 0246-0251, 0758, 1275 |
| HUABAO | 0336-0344, 1360, 1878 | TATUNG | 0419, 0420, 0932, 1955 |
| HUAKE | 0408, 0920, 1944 | TCL | 0273-0281, 0476, 0493, 0570, 0786, 1305 |
| HUAMEI | 0402, 0460-0465, 1426, 1999 | TECO | 0256, 0473-0475, 1792 |
| HUALING | 0317-0325, 0452, 0964 | TIANDI | 0415, 1439 |
| HUIFENG | 0370, 0882 | TOSHIBA | 0107-0117, 0479, 0489, 0561, 0562, 1001, 1643 |
| HUIKANG | 0368, 0441-0443, 1392, 1979 | TRANE | 0227-0232, 0739, 1768 |
| HYUNDAI | 0202, 0433, 0480, 1226, 1969 | UNI-AIR | 0222-0224, 0450, 0734, 1986 |
| JDC | 0373, 0440, 0952, 1909 | WAN BAO | 0138-0152, 0666, 0995, 1177 |
| JIANGNAN | 0432, 1456 | WEILI | 0393-0396, 0907, 1420, 1929 |
| JINDA | 0414, 0926, 1950 | WHIRLPOOL | 0164-0170, 0502, 0677, 1760 |
| JINSONG | 0389-0391, 0446-0448, 1984 | WINIA | 0481, 0550, 0993 |
| JOHSON | 0245, 0492, 1269, 1516 | XILENG | 0411, 0412, 0924, 1947 |
| KANGLI | 0374, 0375, 1399, 1910 | XINLE | 0400, 0401, 0913, 1452, 1936 |
| KELOH | 0282-0287, 0473, 0485-0488 | YANGZI(YAIR) | 0403, 0915 |
| KEIMATAIR | 0225, 0226, 0452, 0737, 1761 | YINYAN | 0258, 0259, 0326-0331, 0478, 0838 |
| KONKA | 0397, 0457-459, 1933 | YORK | 0107, 0238-0243, 0573, 0750, 1266 |
| LG | 0197-0200, 0514, 1026, 1733 | ZHEN BAO | 0129-0137, 1151, 1488, 1664 |
| LIANGYU | 0233, 0451, 0745, 1257 | | |



6 974246 133021 1

CE NO.K-E-00227
MADE IN CHINA

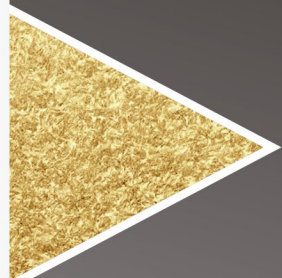

· Vacuum coating keys

· LCD background light display

· Thermometer function

· Clock function

· Patent of code setting--numeric input directly

2000 in 1



Product Description

KT-N898 is a new product with the patent of code setting which is invented by our engineers. You can input the numeric keys (0-9) for the code required directly, visual and convenient, quick and efficient. It has accurate clock, timer on and off, room temperature display, conversions between Celsius and Fahrenheit degree, code memory . So it is your best choice.

Please read this manual carefully before using, which will be a great help for you to use the remote control.

The remote control can be used after setting. Pull side cover of remote control down and put 2 AAA (UM-4, R03) batteries as per polar indicated on battery cabin.

Patent code set up

1. Find out the codes from code table. There are many groups of codes for each brand. Please try the first group; if it does not operate your equipment, try the second, and do it like this until the codes can operate your equipment. Ex: ALPIN, you can input 0252 first; if it does not work, please try the second code 0253 etc.
2. Press the "SELECT" key, the code on LCD will flash. Enter the 4 digit code in turn. Ex: "0252", press the "0" key, "0" stop flashing, the last three numbers flashing, then press the "2" key, the last two numbers flashing, and press the "5" key, the last number flashing, finally press the last number "2", all of the 4 digit code "0252" stop flashing, code entry is now complete. The remote control confirms the code automatically, and you can use the numeric key normally. You can operate your air conditioner now.
3. Turn on the air conditioner and try other function keys. If they do not work well, please try the next group of code until all the functions can work. The remote control is 2000 codes in one, so it is invalid when the code is larger than 1999.

Auto-search code setting

If you do not know the brand of your air conditioner, or if your brand is not listed in the code table, please operate as the following steps:

1. Put the remote control aim at your air conditioner, press the "SELECT" key for 5 seconds and then release, remote control is entering the auto-search status, send the signal continuously, the code flashes and increases. While the air conditioner receives the signal, and send one buzzer, press any key to confirm.
2. Try other function keys, if they do not work, repeat above steps until it is correct.

Clock set up

1. Press the "CLOCK" key, clock signal flashes.
2. Press "TIME +/ TIME -" key to adjust to the current time.
3. Press the "CLOCK" key again, and clock signal stop flashing, the time setting finishes. (If you do not press the "CLOCK" key , it would finish automatically after 15 seconds)

Timer on

1. Press the "TIMER ON" key, the time on LCD flashes
2. Press "TIME +/-" key, adjust the time when you want to make the air conditioner turn on automatically
3. Time on LCD will stop flashing after 15 seconds. Setting is complete

Timer off

1. Press the "TIMER OFF" key, the time on LCD flashes
2. Press "TIME +/-" key, adjust the time when you want to make the air conditioner turn off automatically
3. Time on LCD will stop flashing after 15 seconds. Setting is complete

NOTE

1. If press the "TIMER ON" or "TIMER OFF" key twice, timer is canceled.
2. After timer setting is finished, you should make sure the remote control aims at the A/C receiver in valid distance and there are no obstacle between the remote control and receiver. If not, it can not work.
3. If you want to check the time of timer, press the "TIMER ON" or "TIMER OFF" key, the LCD will display the time of timer and after 5 seconds it will display current time.

Conversions between Celsius and Fahrenheit degree

Press the "C/F" key to convert the display between Fahrenheit and Celsius display

Attention

1. If it is not used for a long time, remove the battery to avoid leakage liquid of the battery damaging the machine. When the LCD looks dim, please change batteries. (New and old batteries can not be used together) After the batteries are replaced every time, it is not necessary to set model code again.
2. As usual the LCD only display the current time, if you want to view the selected code, press the "ENTER" key. After 5 seconds it would display the current time again.
3. If the timer on/off doesn't work, please check carefully to see if there is obstacle between the remote and air conditioner. Because the operation is effective only when the air conditioner receives the timer on/off signal from remote controller.
4. The manufacturer keeps the right to change the parameter and function of product.

Technical Parameters

Controllable distance: ≥ 8 meters
Power supply voltage: DC 3 V
Battery model: Battery AAA(UM-4, R03)×2
Dimension: L166mm×W57mm×D19.5mm
Weight: Approx 110g (without batteries)